


hager

6M 5019.a

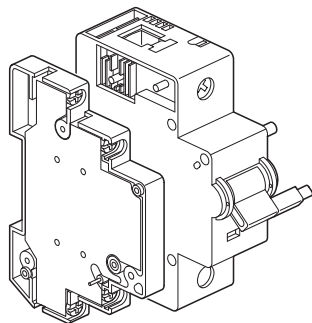

(F)

(GB)

MZ 211


Contact auxiliaire
Auxiliary contact

MZ 213

Bobine à émission
Shunt trip


Notice d'instructions
User instructions

MZ 211, MZ 213

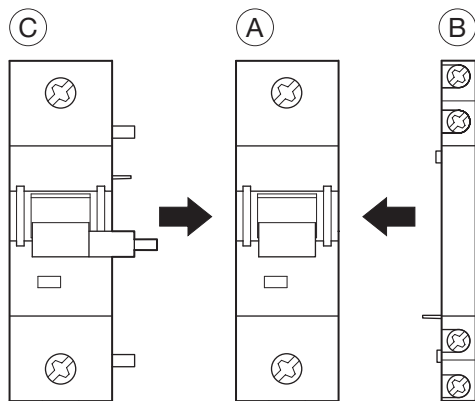


(A) **NM...C** 80 - 125 A
NM...D 80 - 100 A

(B) **MZ 211**

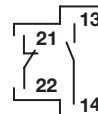


U_e 250 V ~
 U_{min} 24 V ~
6 A AC 13





(C) **MZ 213**

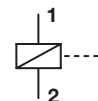


U_c 110 - 415 V ~
 U_c 110 - 220 V =

    
MZ 211

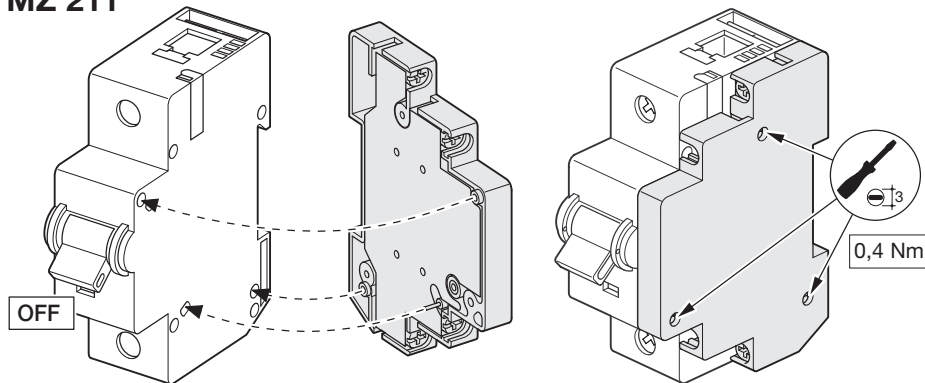

 (mm ²)	0,5...2,5	1 max.
 (mm ²)	0,5...1,5	2 max.
	 PZ1 ø5	0,8 Nm
	  0,6  ø5	

 MZ 213

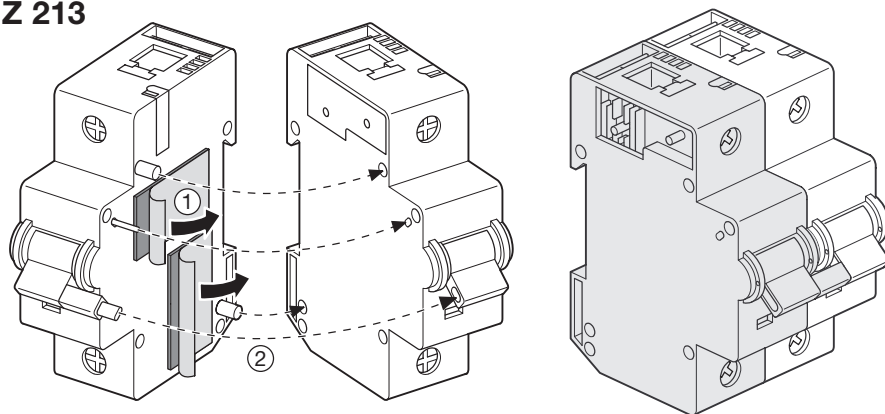

 (mm ²)	1...25	1 max.
 (mm ²)	1...16	2 max.
	 PZ2 ø6	2,4 Nm
	  0,6  ø6	